


Main Features:

- 1.Compact design for laptop users
- 2.Cherry MX switches inside
- 3.Arbitrary programming key-code and LED colors (Backlit only)
- 4.Build in 4 layers for programming
- 5.PBT DSA profile keycaps with Dye-Sublimated technology
- 6.Anodized CNC-machined aluminum case (Narrow bezel)
- 7.Detachable Micro USB cable

Package Content:

- 1.Keyboard x 1
- 2.Micro USB Cable x 1
- 3.Extra Mac & RGBY modifiers keycap

Keyboard Layout (Default):

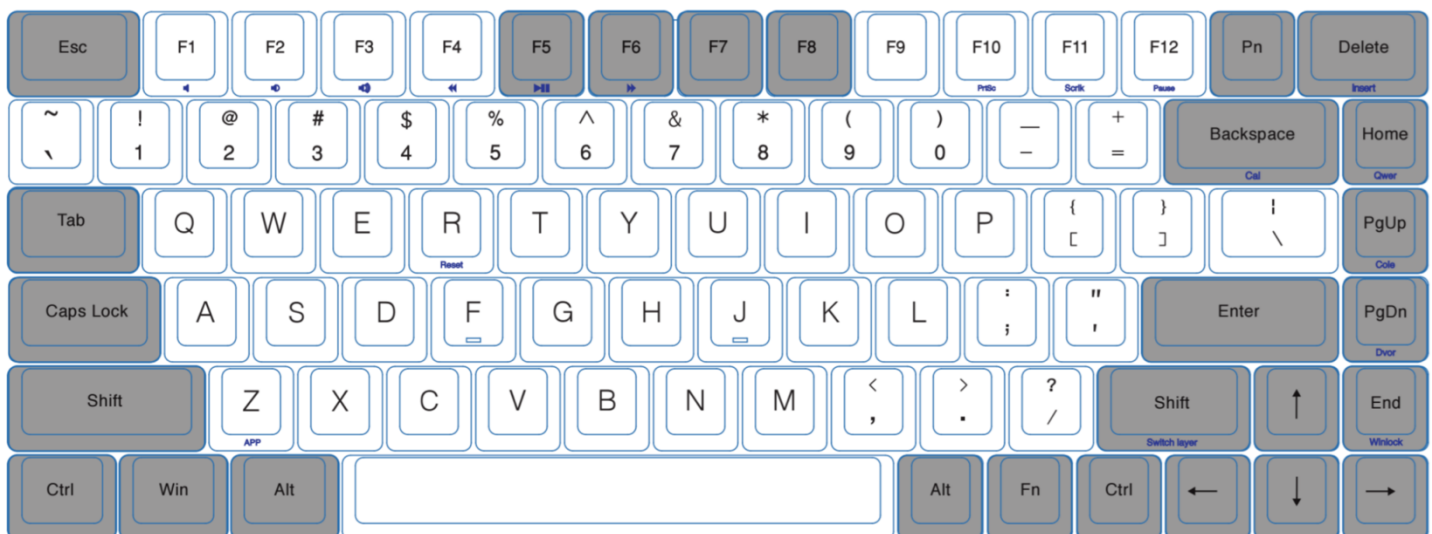

1. Switch O.S:

a. Windows: Pn + W

b. Mac: Pn + M

Windows interchangeable with Alt

F1~F12 please refer to the mac keyboard layout

Some keys need to set their own

c. Linux: Pn + L

Caps lock interchangeable with L_Ctrl

2. Switch Keyboard Layout:

a. QWERTY: Fn + Home

b. COLEMAK: Fn + PgUp

c. DVORAK: Fn + PgDn

3. Spacebar LEDs instructions:

a. Left side LED – Switching Layers (Fn + R_shift)

Red - Layer 1

Green - Layer 2

Blue - Layer 3

None - Default

b. Right side LED – Switching layout Windows lock

Red - COLEMAK

Green - DVORAK

Blue – Windows lock None – QWERTY (Default)

4. Other functions:

- a. Programming steps please refer to POK3R manual
- b. Reset the current layer key-codes: Fn + R
- c. Reset all layers' key-codes and restore to default: L_Alt + R_Alt
- d. Swap Fn position:

Hit Fn + L_Alt for 3 seconds then select new Fn key location directly

Multi-color dynamic Backlighting				Remark	
Pn	+	ESC	=	Palette	
		1		Single Color - Red	
		2		Single Color - Green	
		3		Single Color - Blue	
		4		Display single color LED mode ^{*2}	
		5		Display full color LED mode ^{*3}	
		9		Custom LED mode 1	
		0		Custom LED mode 2	
		-_		Display recording 1	
		=+		Display recording 2	
		X		Brightness down	
		V		Brightness up	
		<		Light effect speed up	
		>		Light effect speed up	

Note:

*2 Interactive mode, Flash vortex mode, Aurora mode.

*3 Full key light mode, Breath mode, Vortex mode, Rain drop mode.

RGB LEDs edit descriptions:

The RGB Race 3 has a total of 3 layers to edit the LEDs.*4

Step 1. Choose a layer (Fn+<, > or ? key) you want to edit.

Step 2. Press Pn + 9 or 0 to enter the edit mode.

Step 3. Press Pn + 1, 2 and 3 to mix color*5 **OR** press Pn + ESC*6 to turn on the palette and select a color you want.

Step 4. Select a key or a row you want to change color. Step 5. Press Pn + 9 or 0 again to exit edit mode. Step 6. Press Pn + - or Pn + = to display the previously saved setting.

Note:

*4 Each layer can be edited in single key (Pn+9) or whole row (Pn+0)

*5 The color you mixed will show on Pn key

*6 There are total have 61 kinds of colors on palette.